


How to use HyperTerminal written bootloader into Flash

1,First we must download some software。(It's just used for Vu Solo 2 se)

1)mcu_falsh 2)HyperTerminal 3)solo2_bootloader

2,Then we open the update.exe from the MC_FLASH folder

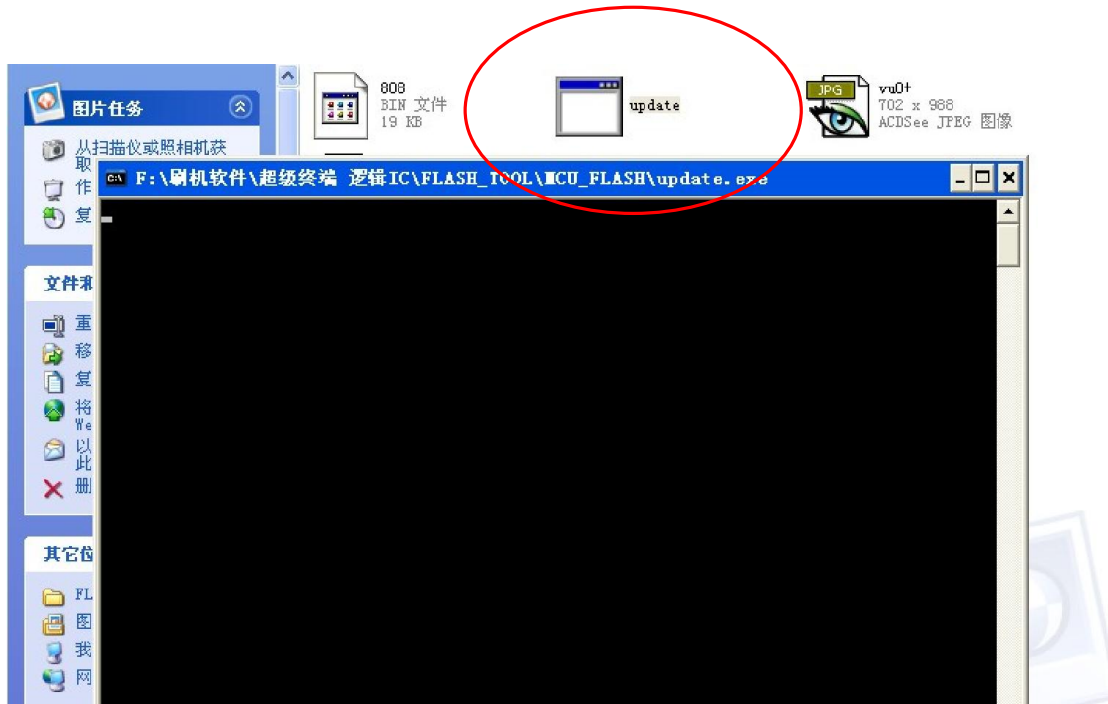

3,Connecting the computer by 232 serial port line,and open the box.(There is instructions in the picture) After completing the above steps, close the software.







The end is connected with the box




4, Open the HyperTerminal and operate the box according to the below instructions

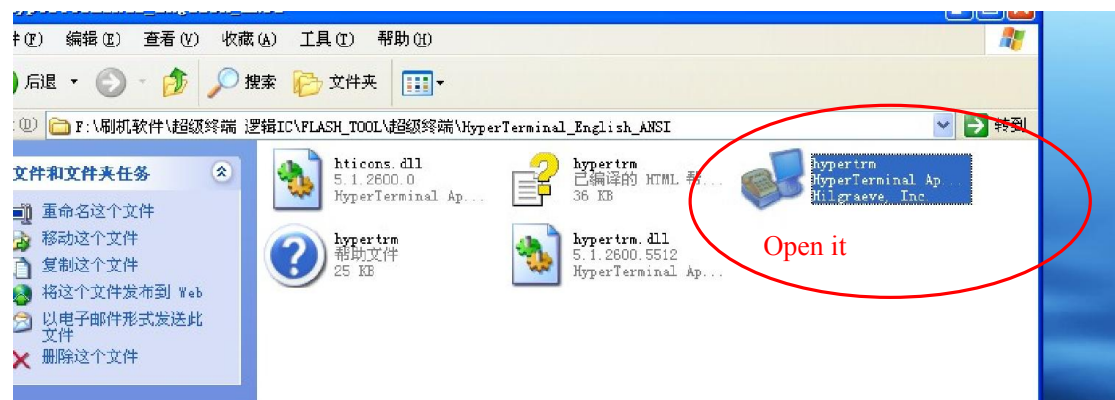

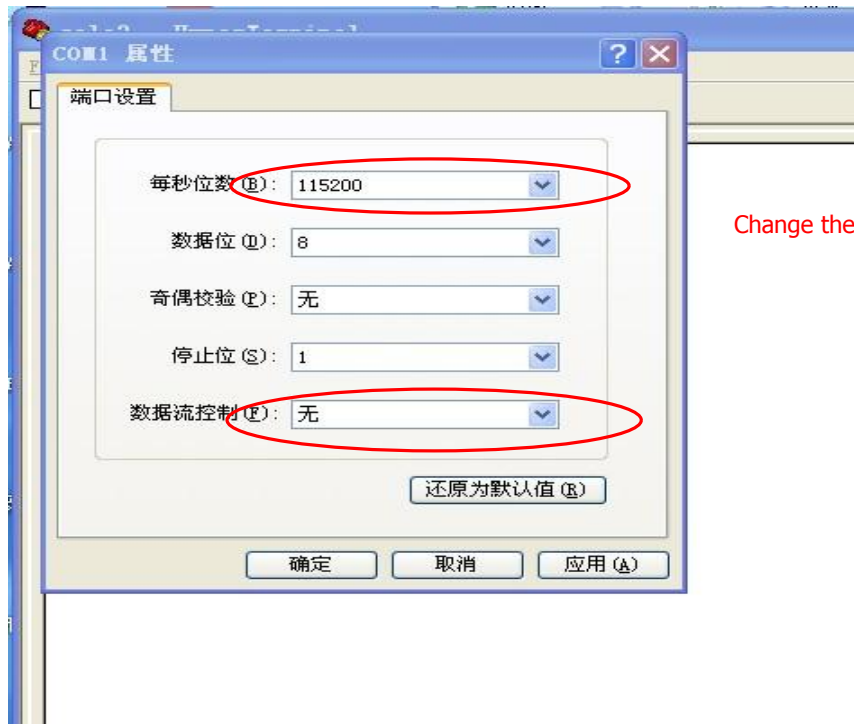


Change the options


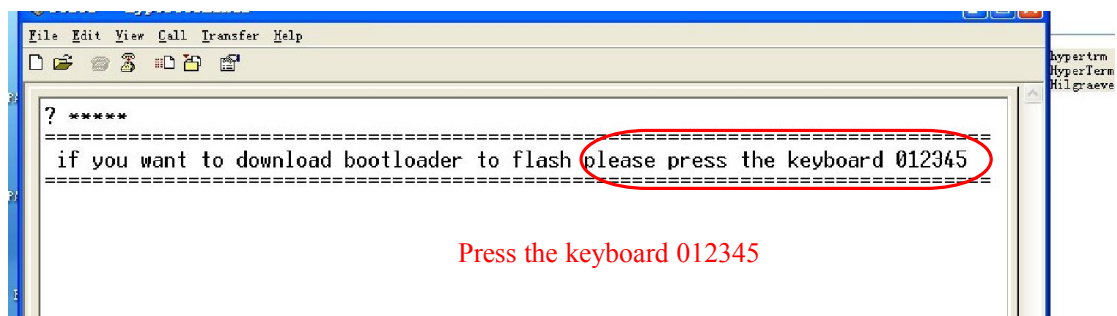


Press the keyboard 012345

After press the keyboard you can see it.

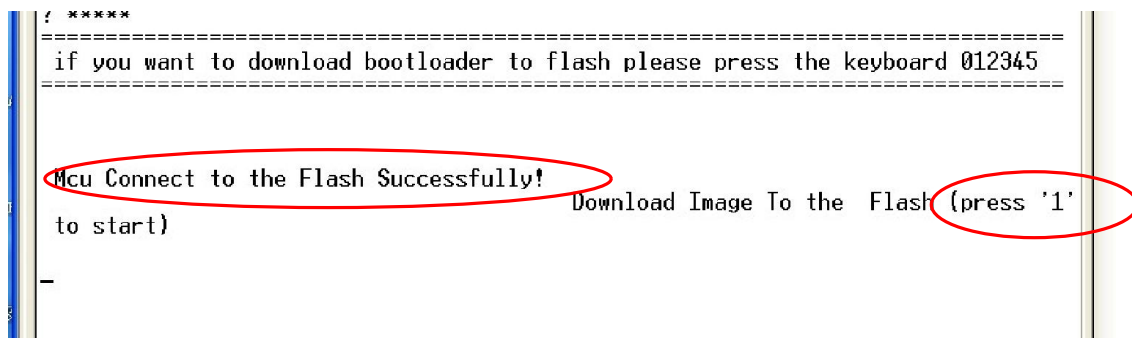

Press the keyboard 1, if you see it shows success

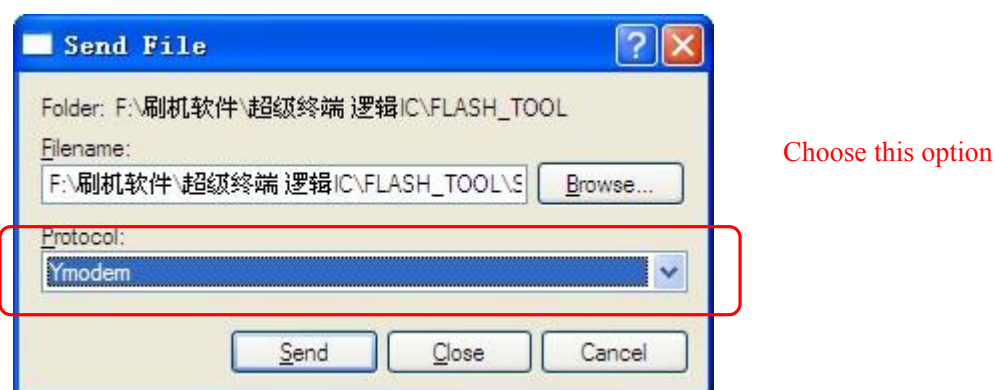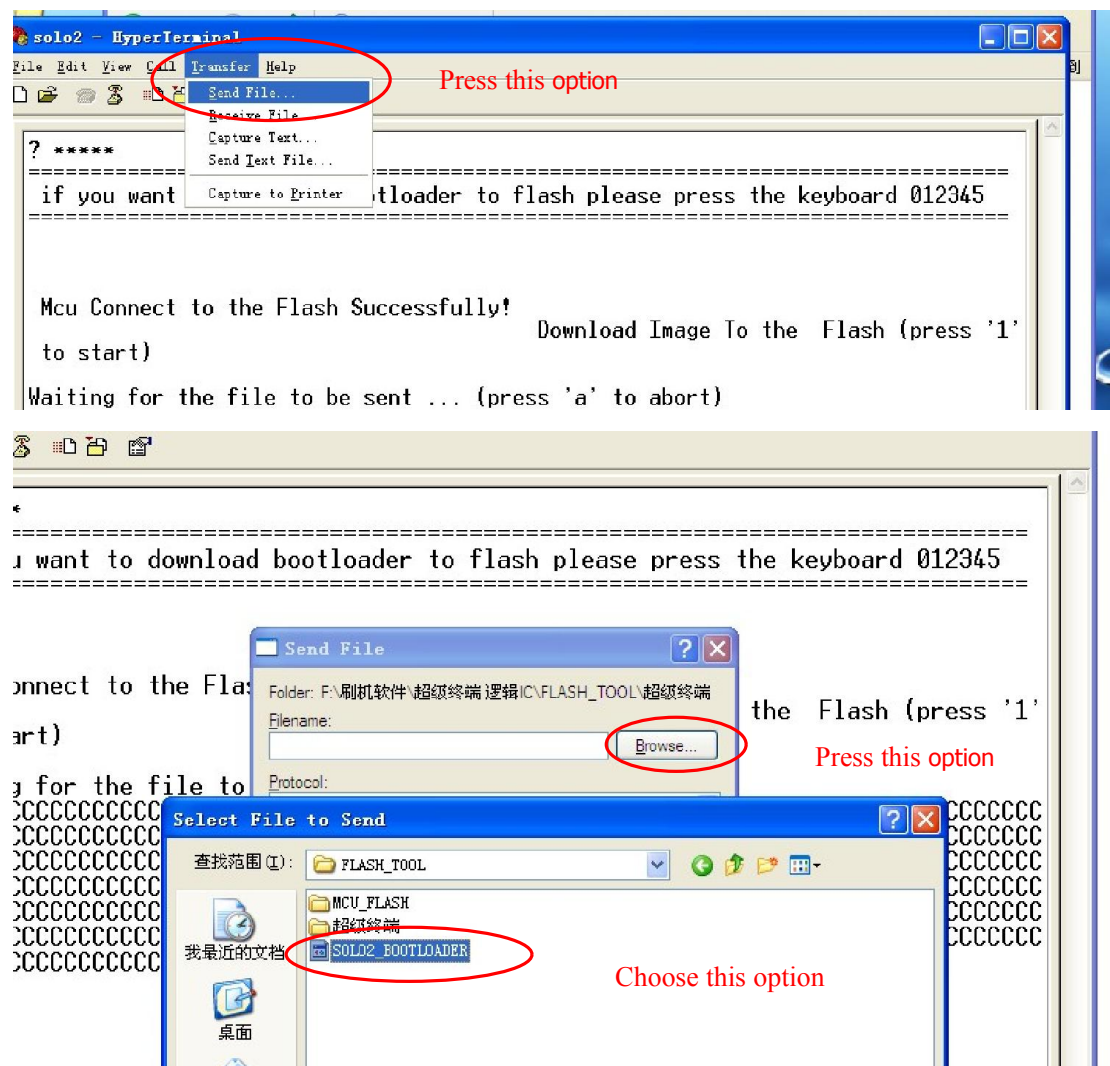

At the end of all, you can update the box by usb.

Notice :Please download all software from www.VU-HD.com